
HOW TO WIRE A DIMMER TO THE CONTROLLER

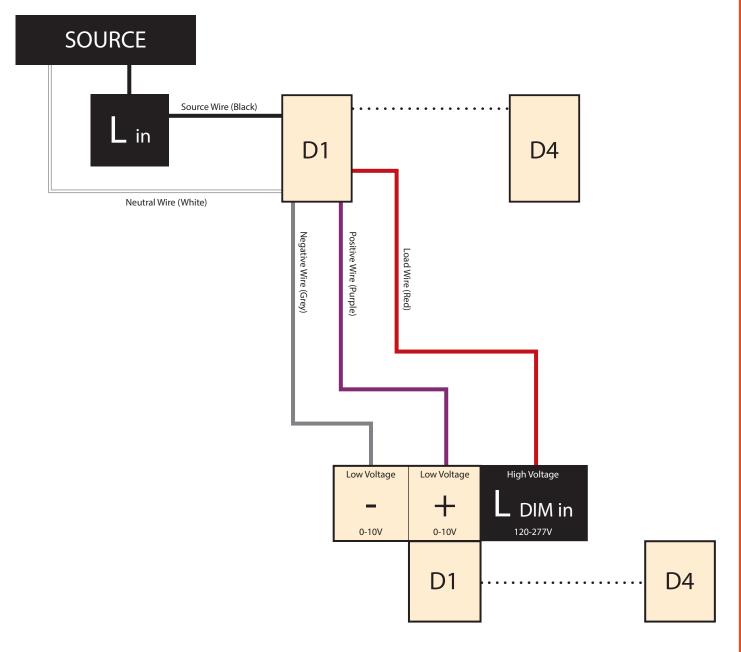

Note 1: Neutral / white wire should be capped if dimmer is not required.

Note 2: If one dimmer is used to control more than 1 heater, jump all <u>L Dim in</u> wires with the dimmer output line (Red Wire).



 Serious injury or death may occur. Disconnect from electrical supply before installing or servicing this heater. Read and follow installation clearance requirements outlined in this manual. The Appliance MUST be connected to a properly grounded electrical source.



33 West Beaver Creek Road, Richmond Hill, ON L4B 1L8 Canada Tel: 1.800.660.5391

EurofaseHeating.com

Note: Eurofase Heating reserves the right to make changes to specifications, parts, components and equipment without prior notification. This Installation, operation and service manual may not be reproduced in any form with prior written consent from Eurofase Heating.