

Note 1: Neutral / white wire should be capped if timer is not required.

Note 2: If one timer is used to control more than 1 heater, jump all <u>L Dim in</u> wires with the timer output line (Red Wire).



## **ELECTRIC SHOCK HAZARD!**

 Serious injury or death may occur. Disconnect from electrical supply before installing or servicing this heater. Read and follow installation clearance requirements outlined in this manual. The Appliance MUST be connected to a properly grounded electrical source.

